



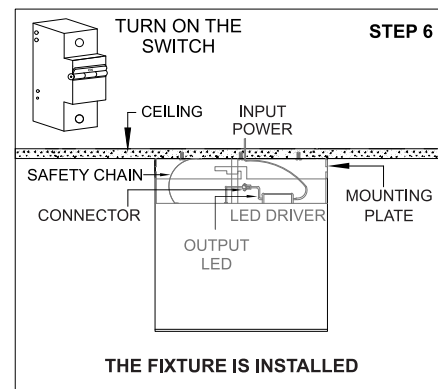
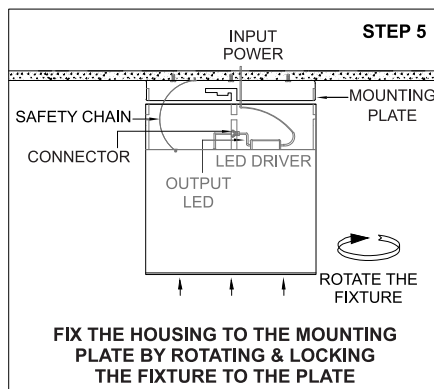
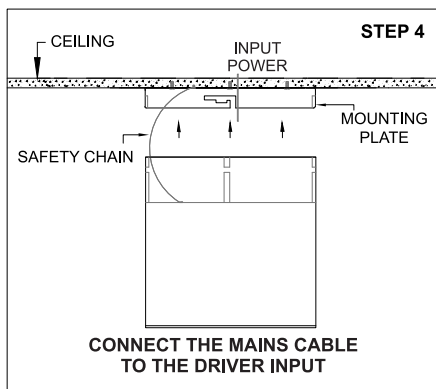
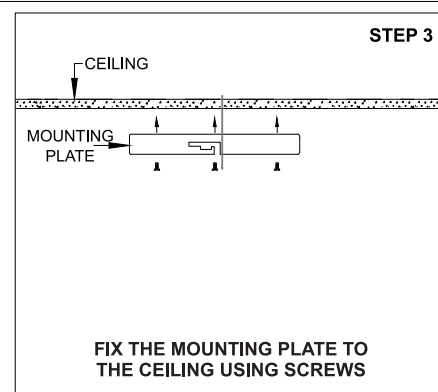
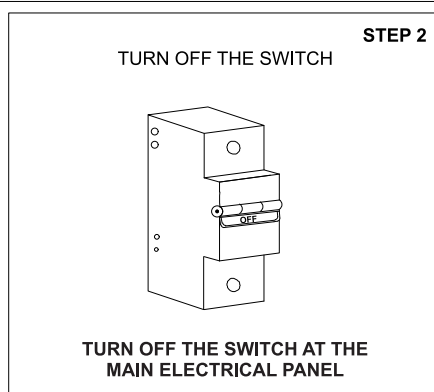
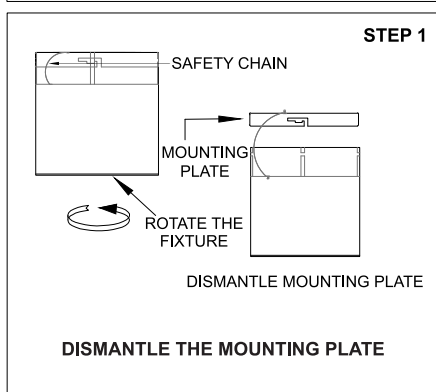
## VIBRANCE RL

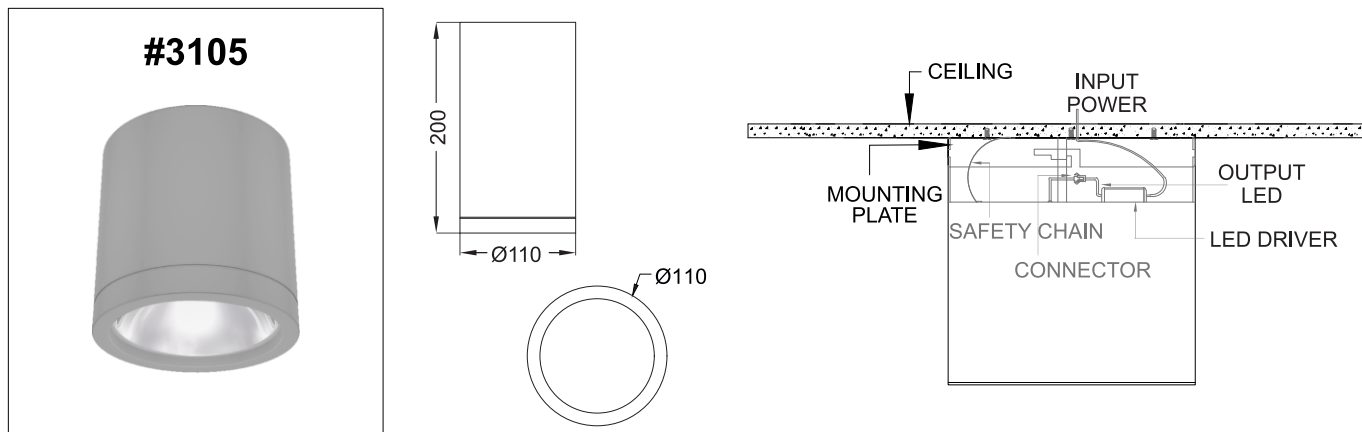

|   |                                  |                                  |
|---|----------------------------------|----------------------------------|
|  <p><b>Class III</b><br/>220-240 V~50/60Hz</p> | <p><b>Power</b><br/>20 Watts</p> | <p><b>IP Rating</b><br/>IP65</p> |
|---|----------------------------------|----------------------------------|

**CAUTION** - Must Be Installed By A Licensed Electrician Only.

- Please read the instructions for the installation of fixture provided below. Warranty will be void unless followed.
- The installation and operation of this fixture must be in accordance with the national safety regulations. L'azure is not liable when damage is caused due to improper installation.
- Please read the detailed product specification sheet available at [www.lazurelighting.com](http://www.lazurelighting.com) for any technical information regarding the fixture.
- Over-voltage protection units should be installed in order to prevent electronic and electrical components from failing due to voltage spikes.



**Disclaimer :** 1. Due to continuous product improvement the installation method is subject to change.  
2. Images and procedures are for representation and reference purpose only.